



Foot Assembly

Attach a foot assembly to each pad and ensure it is secure.

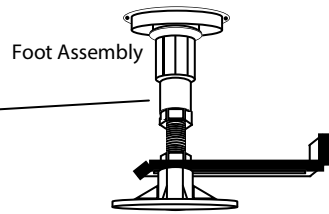


Attach self adhesive pad to each raised part of the base. Ensure the base of the shower tray is dust free before attaching the adhesive pad.

It is essential that you use a reputable **de-greasing agent** to clean the underside of the shower tray, prior to attaching the self adhesive pads.

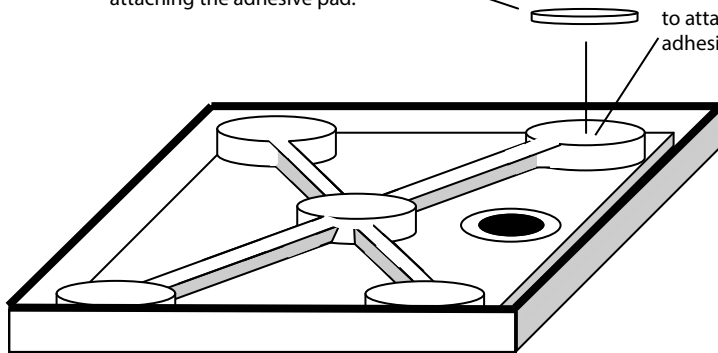

Panel Assembly

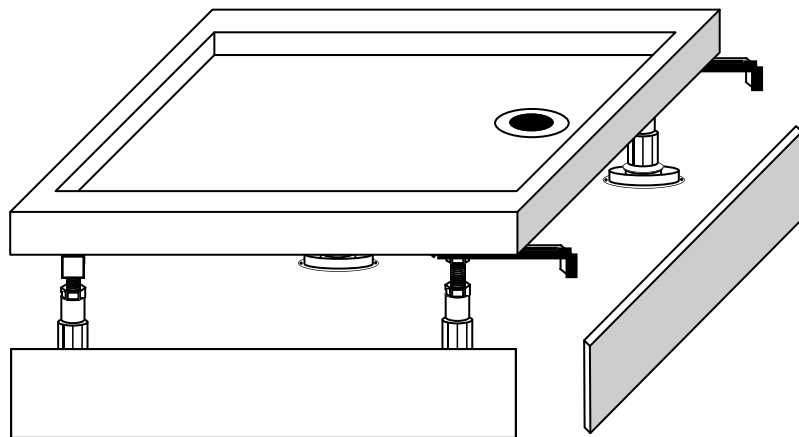

Ensure panel brackets are adjusted accordingly to suit installation
Panel maybe trimmed to suit size of tray

Quality Shower Trays
Manufactured in the U.K.




Easy Plumb Shower Tray Installation Instructions

Square/Rectangular

Prior to fitting your shower tray, carefully remove all the packaging and examine the shower tray for damage

No claims for the damage will be accepted once the shower tray is fitted.

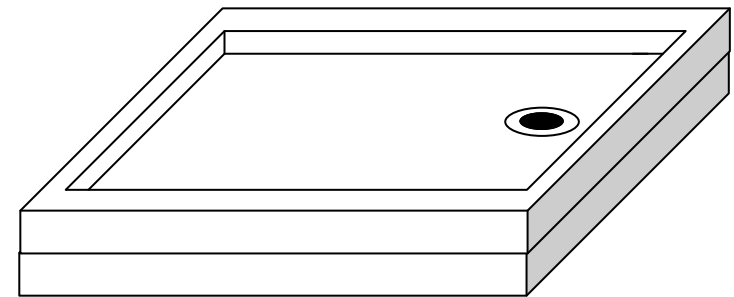

10

Year
Guarantee

Easy Plumb Shower Tray Installation Instructions

Before you start

- Before fixing remove ALL protective covering and examine carefully. Shower tray must be checked for any visible damage.
- Please notify the retailer immediately of any damage or faults
- The manufacturer can not be held responsible for any installation cost that may arise from damaged or faulty products being installed
- The guarantee does NOT cover impact related damage

Safety


- Handle the shower tray with care
- This product is heavy and may require two people to carry
- When drilling walls, check first for hidden pipes and cables
- Use safety eyewear when drilling
- Keep small parts away from children

Aftercare







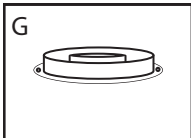
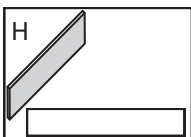
To maintain the quality finish use the following guidelines

1. Clean the shower tray regularly using a damp cloth or sponge, followed by a soft dry cloth
2. Occasionally use non abrasive cleaner to remove stubborn stains

Foot Assembly

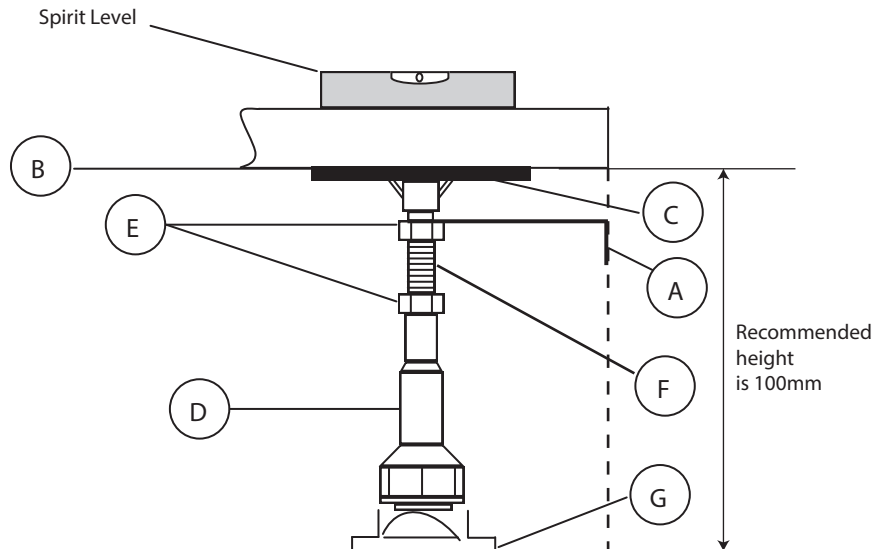

Easy Plumb Shower Tray Check List

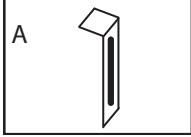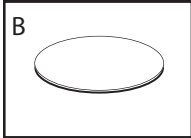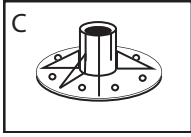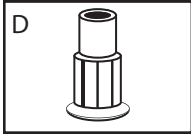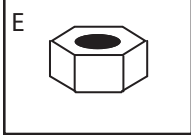	Panel Bracket Including Velcro Strip	700 up to 900 Qty 4	900 up to 1200 Qty 4	1200 up to 1700 Qty 6
	Base Adhesive Pad	700 up to 900 Qty 5	900 up to 1200 Qty 6	1200 up to 1700 Qty 9
	Base Pad Support	700 up to 900 Qty 5	900 up to 1200 Qty 6	1200 up to 1700 Qty 9
	M10 Plastic Foot	700 up to 900 Qty 5	900 up to 1200 Qty 6	1200 up to 1700 Qty 9
	M10 Nuts	700 up to 900 Qty 10	900 up to 1200 Qty 12	1200 up to 1700 Qty 18
	M10 x 80 All Thread	700 up to 900 Qty 5	900 up to 1200 Qty 6	1200 up to 1700 Qty 9
	Floor Pad Adaptor	700 up to 900 Qty 5	900 up to 1200 Qty 6	1200 up to 1700 Qty 9
	Panels Qty 2 according to size of shower tray			