

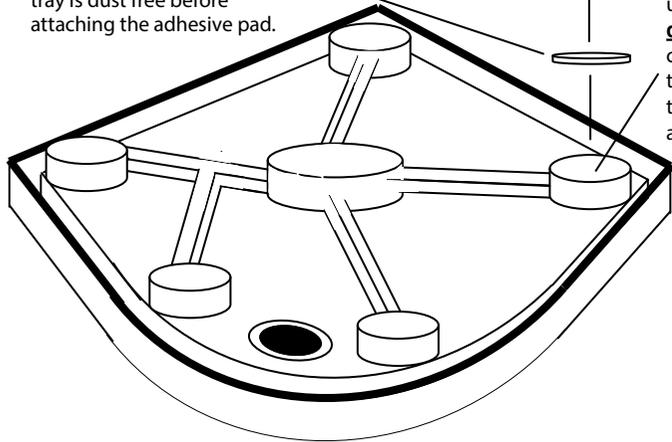
Foot Assembly

Attach a foot assembly to each pad and ensure it is secure.


Attach self adhesive pad to each raised part of the base. Ensure the base of the shower tray is dust free before attaching the adhesive pad.

Floor pad adaptor for securing shower tray to floor.

It is essential that you use a reputable **de-greasing agent** to clean the underside of the shower tray, prior to attaching the self adhesive pads.



Panel Assembly

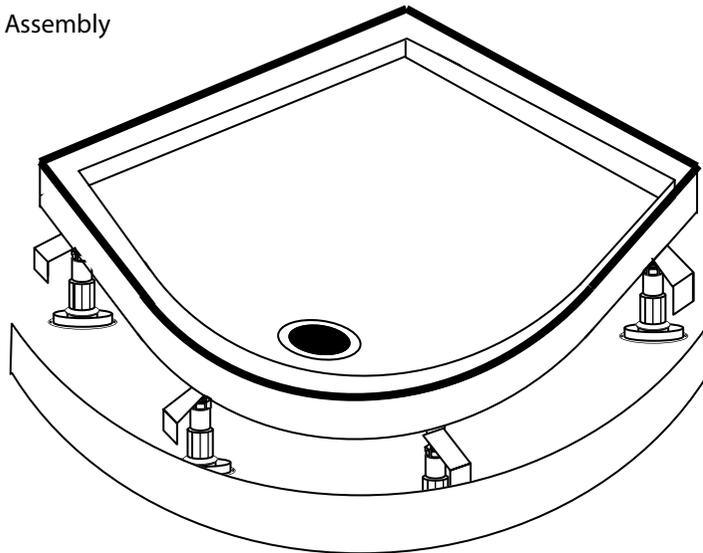

Ensure panel brackets are adjusted accordingly to suit installation
Panels may be trimmed to suit size of tray

Quality Shower Trays
Manufactured in the U.K.

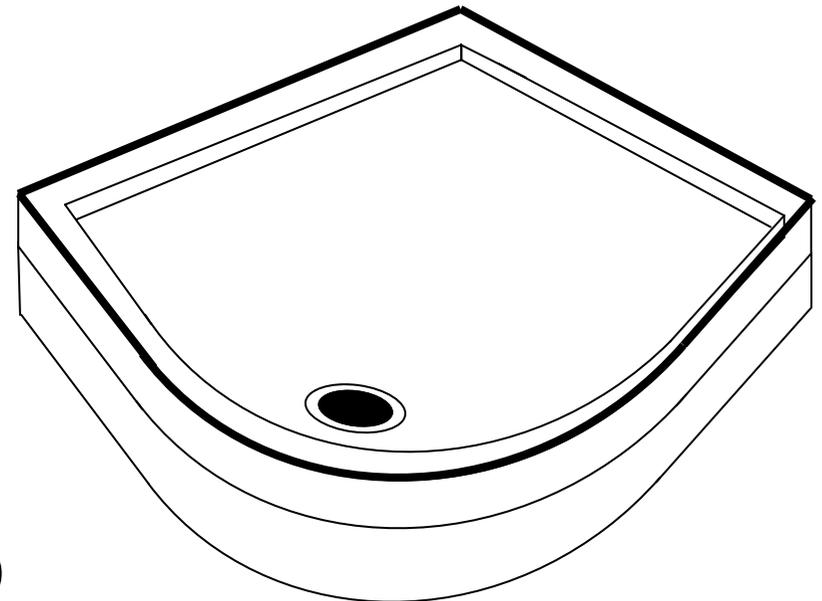


Easy Plumb Shower Tray Installation Instructions

Quadrant/Offset

Prior to fitting your shower tray, carefully remove all the packaging and examine the shower tray for damage

No claims for the damage will be accepted once the shower tray is fitted.



10

Year
Guarantee

Easy Plumb Shower Tray Installation Instructions

Before you start

- Before fixing remove ALL protective covering and examine carefully. Shower tray must be checked for any visible damage.
- Please notify the retailer immediately of any damage or faults
- The manufacturer can not be held responsible for any installation cost that may arise from damaged or faulty products being installed
- The guarantee does NOT cover impact related damage

Safety

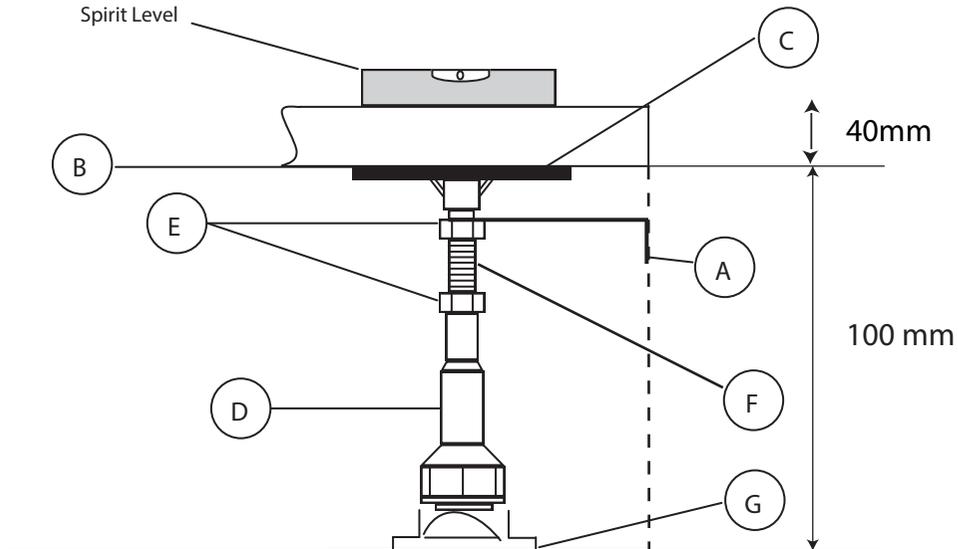
- Handle the shower tray with care
- This product is heavy and may require two people to carry
- When drilling walls, check first for hidden pipes and cables
- Use safety eyewear when drilling
- Keep small parts away from children

AfterCare








To maintain the quality finish use the following guidelines:

1. Clean the shower tray regularly using a damp cloth or sponge, followed by a soft dry cloth
2. Occasionally use non abrasive cleaner to remove stubborn stains

Foot Assembly



Easy Plumb Shower Tray Check List

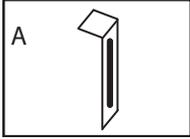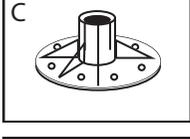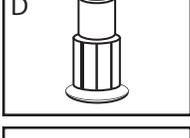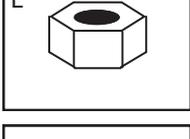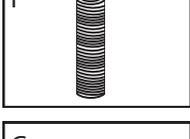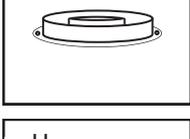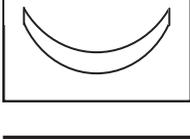		Quadrant 800-1000	Offset quadrant 900-1200
	Panel Bracket Including Velcro Strip	Qty 4	Qty 5
	Base Adhesive Pad	Qty 6	Qty 9
	Base Pad Support	Qty 6	Qty 9
	M10 Plastic Foot	Qty 6	Qty 9
	M10 Nut	Qty 12	Qty 18
	M10 x 80 All Thread	Qty 6	Qty 9
	Floor Pad Adaptor	Qty 6	Qty 9
	Panel	Qty 1	Qty 1